

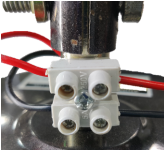





## Is Your Fan Not Working?

<p><b>1</b> STEP</p>	<p>MCB must not be tripped &amp; the supply switch/button should be "ON"</p> 
<p><b>2</b> STEP</p>	<p>Regulator should not be on zero speed setting (regulator should be bypassed as recommended). Operate the fan with remote only.</p> 
<p><b>3</b> STEP</p>	<p>Ensure that the supply cable (Red &amp; Black - Phase &amp; Neutral) - are properly connected with the White OC connector.</p> 
<p><b>4</b> STEP</p>	<p>Input power supply should be in the range of 140Vac to 285Vac. AC supply across the wires at both the points A and B should be within the range of 140Vac to 285Vac.</p> 
<p><b>5</b> STEP</p>	<p>Crosscheck the efficacy of remote keys by using a mobile camera as shown in image. On pressing the keys, If the LED lights of the remote are not glowing then the remote keys are not working.</p> 