

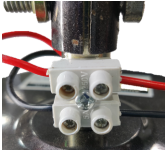





Is Your Fan Not Working?

<p>1 STEP</p>	<p>MCB must not be tripped & the supply switch/button should be "ON"</p>	
<p>2 STEP</p>	<p>Regulator should not be on zero speed setting (regulator should be bypassed as recommended). Operate the fan with remote only.</p>	
<p>3 STEP</p>	<p>Ensure that the supply cable (Red & Black - Phase & Neutral) - are properly connected with the White OC connector.</p>	
<p>4 STEP</p>	<p>Input power supply should be in the range of 140Vac to 285Vac. AC supply across the wires at both the points A and B should be within the range of 140Vac to 285Vac.</p>	
<p>5 STEP</p>	<p>Crosscheck the efficacy of remote keys by using a mobile camera as shown in image. On pressing the keys, If the LED lights of the remote are not glowing then the remote keys are not working.</p>	