





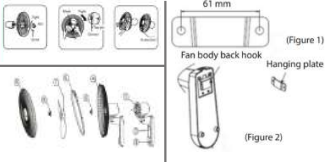




Is Your Fan Wobbling?

<p>1 STEP</p>	<p>Ensure that the mounting plate assembly has been installed properly on a flat wall surface as shown in image.</p> <div style="display: flex; justify-content: space-around; align-items: flex-end;">   </div> <p style="text-align: right; font-size: small;">Installed at plain surface</p>
<p>2 STEP</p>	<p>Ensure that the plastic nut for blade and grill has been tightened properly as shown in image.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <p style="text-align: right; font-size: small;">Anticlockwise-Tight Clockwise-Loose</p>
<p>3 STEP</p>	<p>In case of wobbling issue, switch on the fan by removing the blade to crosscheck if the problem is with the blade or with the motor assembly. In either case, kindly contact Atomberg's Service Team.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <p style="display: flex; justify-content: space-around; font-size: small;"> Without Blade With Blade </p>
<p>4 STEP</p>	<p>If the problem continues to persist, then re-install the fan according to the standard procedure shown in the image.</p> <div style="display: flex; justify-content: space-around; align-items: center;">  </div> <p style="font-size: x-small;">61 mm Fan body back hook Hanging plate (Figure 1) (Figure 2)</p>