
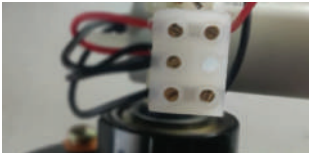
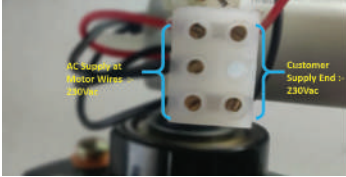


# Naveo GV4



## Is Your Fan Not Working?

<p><b>1</b> STEP</p>	<p>MCB must not be tripped &amp; the supply switch/button should be "ON"</p> 
<p><b>2</b> STEP</p>	<p>Ensure that the supply cable (Red &amp; Black - Phase &amp; Neutral) - are properly connected with the White OC connector.</p> 
<p><b>3</b> STEP</p>	<p>Input power supply should be in the range of 140Vac to 285Vac. AC supply across the wires at both the points A and B should be within the range of 140Vac to 285Vac.</p> 
<p><b>4</b> STEP</p>	<p>For a Better Performance use step regulator as the fan will not operate at a lower range if used with a non compactible stepless (Triac based)Regulator.</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="800 1150 921 1285"> <p>Dimmer Regulator (Triac)</p> </div> <div data-bbox="945 1150 1077 1285"> <p>Step Regulator (Capacitive)</p> </div> </div>
<p><b>5</b> STEP</p>	<p>Ensure to use Eleetronic Regulator only, Using Electric Regulator will affect the fan performance</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="764 1369 921 1486"> <p>Electronic Regulator</p> </div> <div data-bbox="945 1369 1101 1486"> <p>Electric Regulator: Resistive Regulator</p> </div> </div>