

## SPECIFICATIONS

Voltage / Frequency	220-240 V and 50 / 60 Hz
Power Consumption	37 W
Product Dimensions (W x H x D)	approximately 25 x 120 x 29 cm
Product Weight	approximately 1.43 kg (3.15 lb)
Motor Brand	Atomberg (Efficio) Pedestal Fan

## WARRANTY INFORMATION

To obtain a copy of the warranty for this product:

Visit <http://www.atomberg.com>

For customer service and warranty-related queries, please contact us at: 04888-88842 (available from Monday to Saturday, from 10:00 AM to 5:00 PM, except on national holidays).

12



## PEDESTAL FAN EFFICIO+



## INSTRUCTION MANUAL

**IMPORTANT NOTE:**  
Read the manual carefully before installing or connecting your new Atomberg® Pedestal Fan. It is very important to be accurate in following the instructions.

## TABLE OF CONTENTS

Welcome guide	03
Important safeguards	04
Warning! Risk of injury	04
Important instructions	05
Descriptions of signal words	05
Intended use	05
Before first use	05
Assembly instructions	06
Assembly of product base and height adjustment pipe	06
Assembly of the fan head, grills and blade	07
Instructions for use	08
Operation	09
Control panel	09
Turning on/off	09
Speed	10
Oscillation	10
Height/angle adjustment	10
Cleaning and maintenance	11
Troubleshooting	11
Specifications	12
Warranty information	12

## CLEANING AND MAINTENANCE

**WARNING** Risk of electric shock. To prevent electric shock, unplug before cleaning. Define cleaning as not removing the electrical parts of the product or system or other tools. Remove only the product according to the user's manual.

### CLEANING

- To clean, wipe with a soft, slightly moist cloth.
- Regularly clean dust and dirt from the grilles using a vacuum cleaner.
- Ensure that the fan is switched off from the supply source at the heat grille is removed.
- Dry the product after cleaning.
- Never use corrosive detergents, wire brushes, abrasive sponges, metal or sharp objects to clean the product.

### MAINTENANCE

Store in cool and dry place away from children and pets, ideally in the original packaging.

## TROUBLESHOOTING

MODE	DESCRIPTION
The product cannot be switched on	Check if the power plug is connected to the power power outlet. Check if the power outlet works. Wait for the product to cool down.
The product makes noise	Adjust the blade, grill and base.
The product vibrates	Place the product on a level surface. Clean and tighten the cable and base.

11

## OPERATION

### SPEED

**NOTICE** This product features 6 speed settings. Minimizing the ON/OFF switch (on the front and OFF) from between 6 speed settings and then turn off the (1-2-3-4-5-6) (ON) (OFF) speed button.

To change between the speed settings, press the (1-2-3-4-5-6) (ON) (OFF) speed button on the rear panel.


### OSCILLATION

To turn on the automatic oscillation, look for "Oscillation" button "ON" again, to turn the oscillator on/off, pull the oscillation button "ON" again.

### HEIGHT / ANGLE ADJUSTMENT

#### Height adjustment

- Turn the locked screw on the height adjustment.
- Move the rear section up or down.
- Secure the cable with the locking disk around screw vertically.

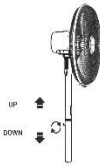

#### Angle adjustment

- The angle of the fan can be adjusted manually at an angle. Simply turn the adjustment screw.



10

## ASSEMBLY INSTRUCTIONS

### INSTRUCTIONS FOR USE

Before using the fan, make sure that it is on a flat and stable surface. Storage may occur if it is placed on uneven surfaces. Set all the switches to the fan position, and then insert the plug directly into a standard AC power outlet. Do not use the plug for other electrical devices.

- 1) Press the "ON/OFF" switch to start the fan.
- 2) Press the "ON/OFF" switch to lock the speed wheel.
- 3) 1, 2, 3, 4, 5, 6 (ON) (OFF) speed button.
- 4) To set a timer, press timer to ON. ON to the maximum speed (for sleep or 7 hour mode).
- 5) If you want to change the speed zone of your room, press the "ON/OFF" button. The fan will operate and heat generation will be stopped. To change setting, press on/off the setting button "ON/OFF" (the basic setting is "ON/OFF" and "ON/OFF" is the maximum speed).


To completely turn off the fan, turn all the controls to OFF and unplug the plug from the electrical outlet.

08

## WELCOME GUIDE

### CONTENTS

Before going ahead, ensure that the package contains the following components:

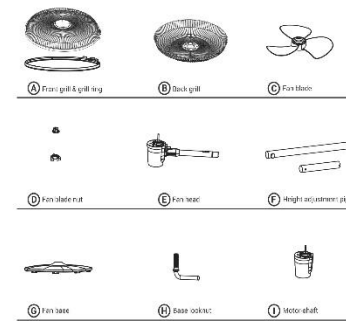

03

## IMPORTANT INSTRUCTIONS

### DESCRIPTIONS OF SIGNAL WORDS

- DANGER** This signal word indicates a hazard with a high level of risk, which must be avoided under all circumstances.
- WARNING** This signal word indicates a hazard with a medium level of risk, which must be avoided under all circumstances.
- CAUTION** This signal word indicates a hazard with a low level of risk, which must be avoided under all circumstances.
- NOTICE** This signal word indicates a hazard (e.g. slip, trip, or fall) or a hazard that is not a personal injury.

### INTENDED USE

- This product is intended for domestic use only.
- This product is intended for use only in dry, indoor areas.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

## BEFORE FIRST USE

- Check for transport damages.
- Clean the product before first use.
- Do not connect it to a fan if it is broken or damaged.

**WARNING** Risk of suffocation: Keep any packaging materials away from children and pets: these materials are a potential cause of suffocation.

05

## IMPORTANT SAFEGUARDS

**WARNING** Read these instructions carefully and retain them for future use. If this product is passed to a third party, give these instructions to the recipient.

**WARNING** This device must be used with a maximum level of risk, which if not avoided could result in serious injury or death.

### WARNING! RISK OF INJURY

- Do not use the product for anything other than its intended purpose.
- Do not connect the product to a power source that is not a power supply source in a current rating comparable to the fan's supply details (see on the product's rating label).
- Do not use the fan for anything other than its intended purpose and do not use it for anything else.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid potential hazards.
- Do not use outdoors.
- Do not expose the product to water.
- Do not use in bathrooms.
- Do not use the product without the fan grill or with a damaged fan grill.
- Do not place any clothes or curtains on the product, as they could be sucked into the fan during operation and cause an accident.
- During use, keep hands, feet, clothing and jewelry away from the fan grill to avoid injury and accidents.
- Unplug the appliance from the power supply before servicing.
- This appliance is not intended for use by persons (including children) with a lack of the necessary physical and mental capabilities and knowledge, unless they are supervised or given instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with this appliance.

04

 
## ASSEMBLY INSTRUCTIONS

The product is packaged with its base and/or other parts pre-assembled. You must assemble them before operating the fan.

**WARNING** Never operate the fan without its base and/or other parts attached. Operate the fan only in the upright position in any other position could cause a hazardous situation.

### ASSEMBLY OF PRODUCT BASE AND HEIGHT ADJUSTMENT PIPE


- 1) Place the height adjustment pipe into the hole on the base. Then fix the base to the pipe.



06

## OPERATION

### CONTROL PANEL

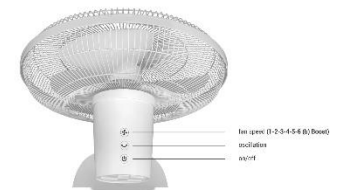


fan speed (1-2-3-4-5-6) (ON) (OFF)  
oscillation  
ON/OFF

09

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY OF FAN HEAD, GRILLS AND BLADE

- 1) Insert the motor shaft into the hole on the fan head. Then fix the motor shaft to the fan head.
- 2) Insert the fan blade into the hole on the fan head. Then fix the fan blade to the fan head.
- 3) Insert the back grill into the hole on the fan head. Then fix the back grill to the fan head.
- 4) Place the fan grill into the hole on the fan head. Then fix the fan grill to the fan head.
- 5) Place the fan blade into the hole on the fan head. Then fix the fan blade to the fan head.
- 6) Insert the back grill into the hole on the fan head. Then fix the back grill to the fan head.

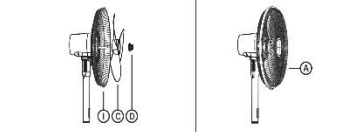

07