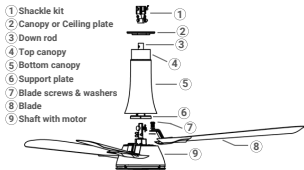
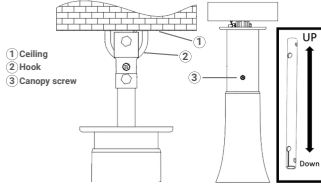
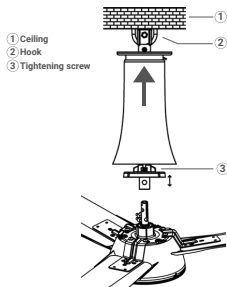
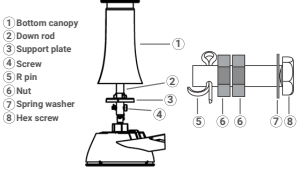


## Concern Regarding Installation

<p><b>1</b> STEP</p>	<p><b>Motor Assembly</b> Make sure all accessories &amp; spare you have received in proper condition as shown in the image.</p> <p>Before installing Atomborg's fan ensure that the fan's switch is off and bypass or eliminate the regulator (using step-5) from the connection for optimal performance</p>  <p>*The picture shown above depicts the exact order of placement of various parts</p>
<p><b>2</b> STEP</p>	<p>Insert the canopy or ceiling plate , attach the shackle set to the ceiling hook using the bolts and nuts and tighten it firmly.</p> <p>Note - Prior to the installation of the down-rod and canopy, make sure the installation of the wires has been done. The installation can also be done with the help of existing wires.</p> <p>If you still have any further queries, you can refer to our installation video link which has been provided.</p> <p>Pull up the top canopy with ceiling plate to cover the shackle assembly and electrical wire connections and tighten the canopy screw to retain the position.</p> 
<p><b>3</b> STEP</p>	<p>Insert both the canopy into the shaft and securely attach the shackle to the hanger or ceiling hook using the screws provided with the package. Fasten the nut, and make sure that you fit the safety nut, washer and the R-pin to prevent slipping. Adjust the top canopy so that it covers both the assembly and the connection.</p> <p>Align the holes on the blade shank with the motor holes. Securely fasten the blades with the screws and washer provided. Adjust the support plate as per the requirement to cover the downrod and then tighten the screw.</p> 
<p><b>4</b> STEP</p>	<p>Fit the shaft in the downrod and insert the screw. Insert washer, nuts and r-pin in the same sequence. The bottom canopy will automatically fit on the ring of the top canopy and the support plate, as shown here.</p> 
<p><b>5</b> STEP</p>	<p>Regulator bypassing is recommended.</p> 