
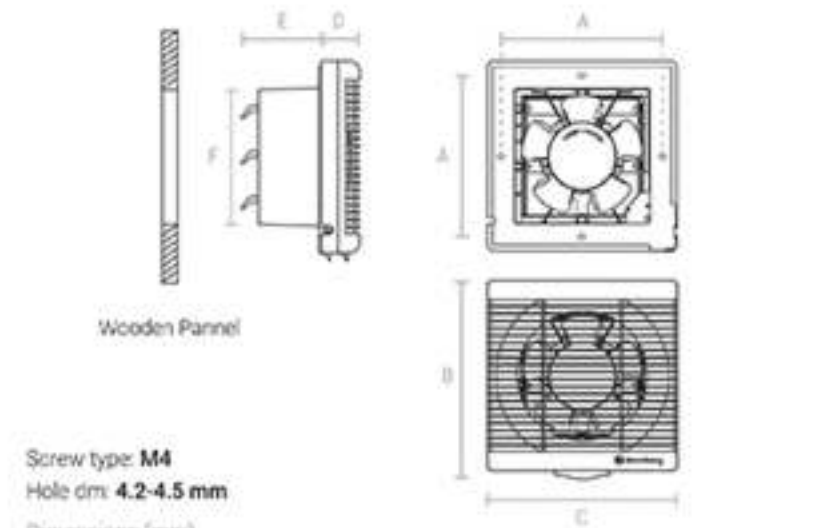

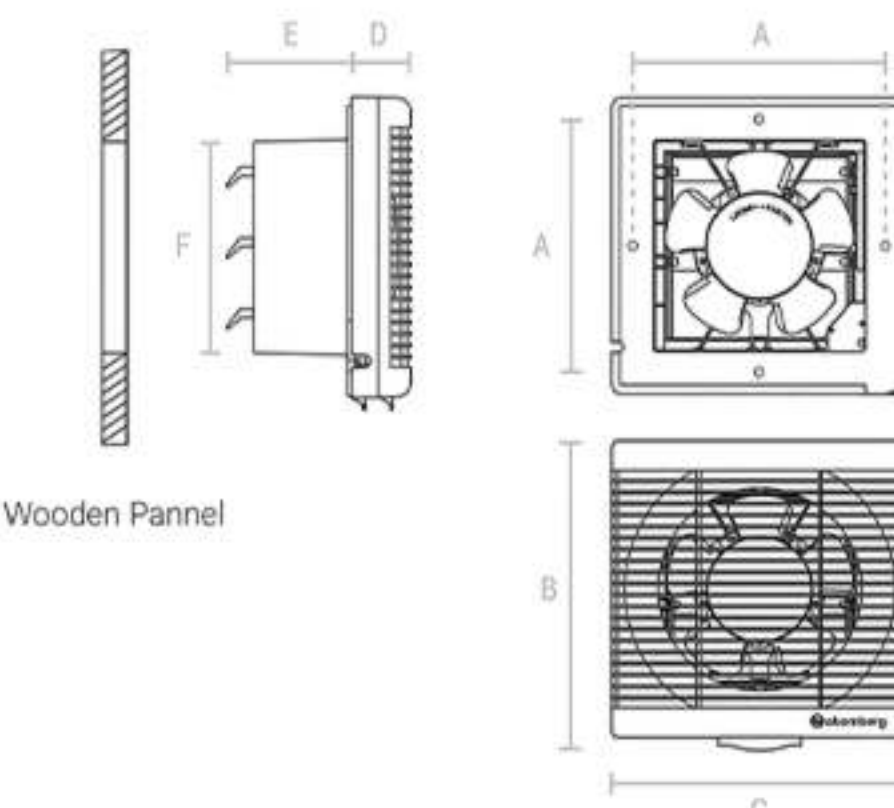
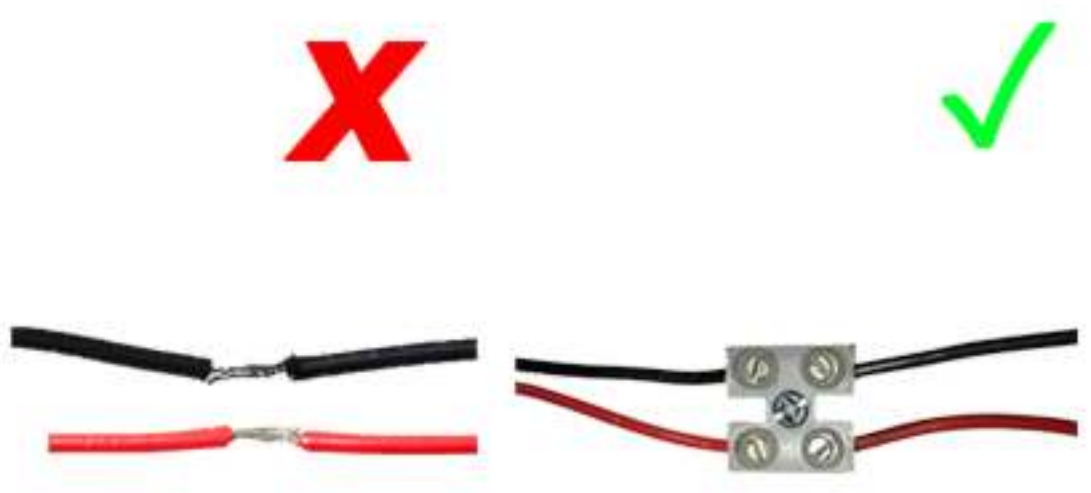
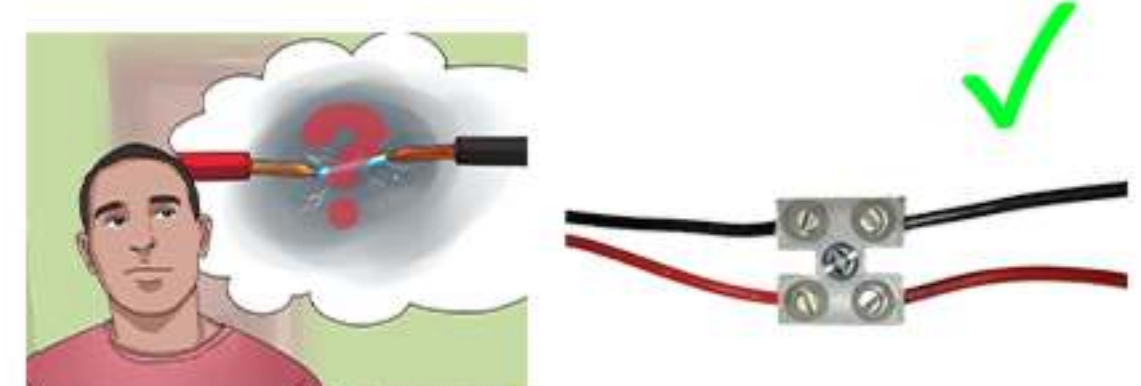




Installation guidelines & problems

<p>1 STEP</p>	<p>The cut out (type of cut) where fan is to be installed must be as per standard guidelines for Efficio 6", 8", 10" (186mm/233mm/270mm) square respectively. If not do not install as it may cause damage to mounting area fan as well physical damage as it may fall due to improper fitting.</p>	 <p>INSTALLATION GUIDE</p>  <p>Wooden Pannel</p> <p>Screw type: M4 Hole dia: 4.2-4.5 mm</p> <p>Dimensions (mm)</p> <table border="1"> <thead> <tr> <th>Size</th> <th>A</th> <th>B</th> <th>C</th> <th>D</th> <th>E</th> <th>F</th> </tr> </thead> <tbody> <tr> <td>6"/150 mm</td> <td>206</td> <td>255</td> <td>245</td> <td>50</td> <td>77</td> <td>175</td> </tr> <tr> <td>8"/200 mm</td> <td>262</td> <td>306</td> <td>296</td> <td>50</td> <td>87</td> <td>245</td> </tr> <tr> <td>10"/250 mm</td> <td>313</td> <td>356</td> <td>346</td> <td>50</td> <td>93</td> <td>290</td> </tr> </tbody> </table>	Size	A	B	C	D	E	F	6"/150 mm	206	255	245	50	77	175	8"/200 mm	262	306	296	50	87	245	10"/250 mm	313	356	346	50	93	290
Size	A	B	C	D	E	F																								
6"/150 mm	206	255	245	50	77	175																								
8"/200 mm	262	306	296	50	87	245																								
10"/250 mm	313	356	346	50	93	290																								
<p>2 STEP</p>	<p>While fastening screws do not place unnecessary washer or any other material to fasten the screw. (As it may cause improper fitting and screws may fall down or rust by time)</p>	 <p>INVALID WASHER</p>																												
<p>3 STEP</p>	<p>While placing fan in the cut out ensure it has been placed properly if it is not placed properly remove it again and try to fit again in the cut out. (Disoriented fitting can cause risk of falling of fan)</p>	 <p>Wooden Pannel</p>																												
<p>4 STEP</p>	<p>After mounting and installing fan properly connect wires of fan to the ac supply and make sure if it a joint of wires it must not be broken or damaged.</p>	 <p>X</p> <p>✓</p>																												
<p>5 STEP</p>	<p>Both the wires red black- (phase neutral) must not touch each other as it may cause short circuit and also damage to product. (It may cause tripping of MCB)</p>	 <p>✓</p>																												