
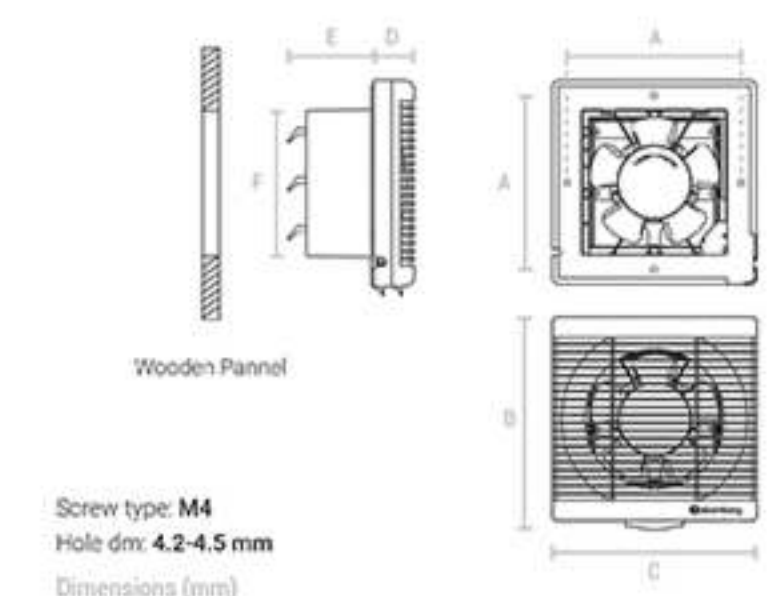
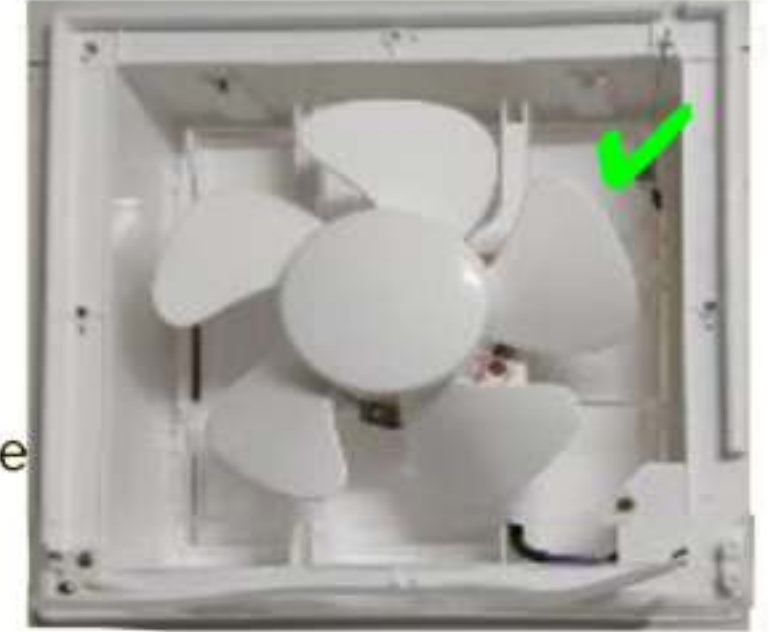
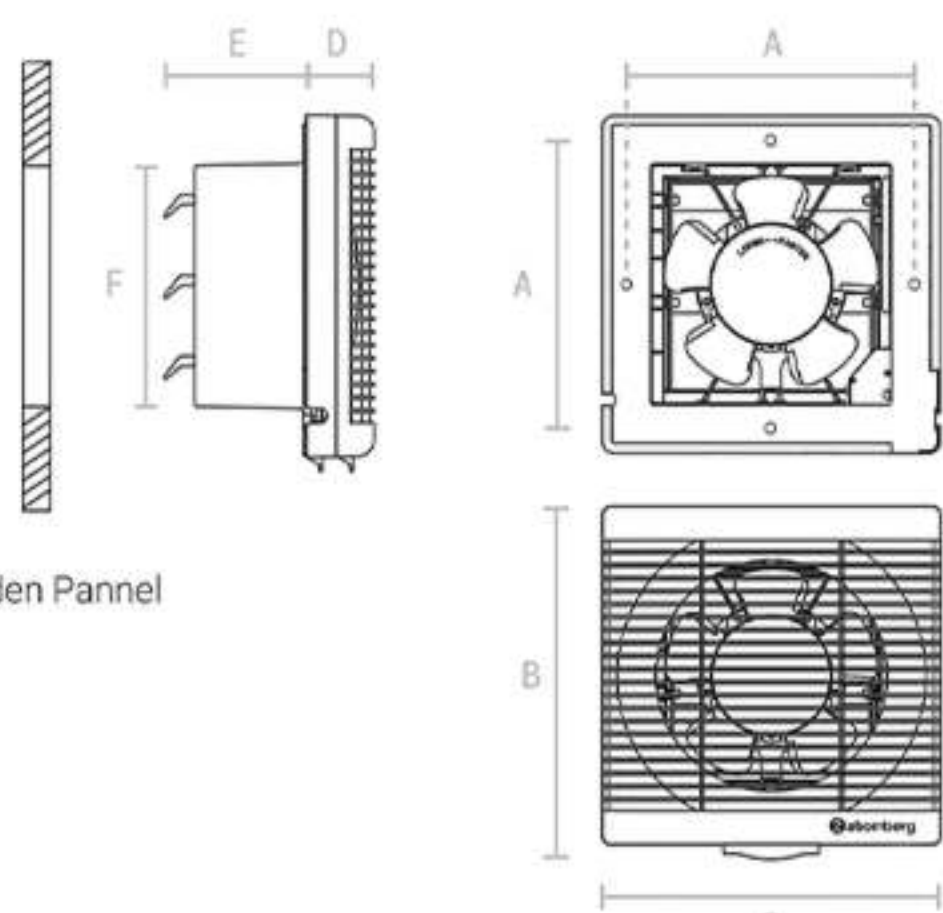




# Is Your Fan Making Noise?

<p><b>1</b> STEP</p>	<p>Fan must be installed as per standard guidelines shown in the image (All Atomberg accessories like outdoor fastening ring indoor fan must be mounted with ideal screws given for fitting ).</p>	 <p>INSTALLATION GUIDE</p>  <p>Wooden Pannel</p> <p>Screw type: M4 Hole dm: 4.2-4.5 mm</p> <p>Dimensions (mm)</p> <table border="1"> <thead> <tr> <th>Size</th> <th>A</th> <th>B</th> <th>C</th> <th>D</th> <th>E</th> <th>F</th> </tr> </thead> <tbody> <tr> <td>6"/150 mm</td> <td>206</td> <td>255</td> <td>245</td> <td>50</td> <td>77</td> <td>175</td> </tr> <tr> <td>8"/200 mm</td> <td>262</td> <td>306</td> <td>296</td> <td>50</td> <td>87</td> <td>245</td> </tr> <tr> <td>10"/250 mm</td> <td>313</td> <td>356</td> <td>346</td> <td>50</td> <td>93</td> <td>290</td> </tr> </tbody> </table>	Size	A	B	C	D	E	F	6"/150 mm	206	255	245	50	77	175	8"/200 mm	262	306	296	50	87	245	10"/250 mm	313	356	346	50	93	290
Size	A	B	C	D	E	F																								
6"/150 mm	206	255	245	50	77	175																								
8"/200 mm	262	306	296	50	87	245																								
10"/250 mm	313	356	346	50	93	290																								
<p><b>2</b> STEP</p>	<p>Extra wire must be not pushed to hide behind fastening ring (As it will create vibrations and noise).</p>	 <p>Wire must go outside from here</p>																												
<p><b>3</b> STEP</p>	<p>If the fan is mounted on aluminum window bracket check if it does not have any gaps between fan and body (As it may create noise in the fan).</p>	 <p>Wooden Pannel</p>																												
<p><b>4</b> STEP</p>	<p>All the screws used to fasten or mount fan on place must be properly tight ensure that nothing is loose.</p>	